



1217 E. 7th Street
Mishawaka, IN 46544
Phone: 1-800-334-4712
1-888-339-2539
Fax: 574-256-6743

T.I.P. Troubleshooting Information on Power Gear

FLAT FLOOR ROOM HEIGHT ADJUSTMENT

This TIP sheet is designed to provide information on setting the room height on a flat floor slide-out system utilizing angled rails.

With the room fully extended-

- Measure from the top of the moving slide-out rail to the bottom of the slide-out room floor up close to the coach. This is dimension "A".
- Measure from the top of the moving slide-out rail to the bottom of the slide-out room floor out near the mounting bracket. This is dimension "B".
- To calculate dimension "B" use the following formula:
"B" (end bracket height setting) = "A" + (slideout room floor thickness) + 1/4".

EXAMPLE:

"B" (end bracket height setting) = "A" + (slideout room floor thickness) + 1/4".

If "A" = 3-1/4"

Then "B" = 3-1/4" + 1" + 1/4" = 4-1/2"

- Perform this check on each slide-out rail independent of the other.

NOTE:

1) These figures are approximates. Each coach may be slightly different.

